

INSTALLATION AND SAFETY INSTRUCTIONS

FOR YOUR SAFETY

WARNING: BE SURE THE ELECTRICITY TO THE SYSTEM YOU ARE WORKING ON IS TURNED OFF; EITHER THE FUSE REMOVED OR THE CIRCUIT BREAKER SET AT OFF.

IF YOU ARE UNCLEAR AS TO HOW TO PROCEED, CONTACT A QUALIFIED ELECTRICIAN.

Lighted lamp is HOT!

WARNING - To reduce the risk of FIRE or INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp.

Lamp gets HOT quickly! Contact only switch/plug when turning on.

Do not touch hot lens, guard, or enclosure.

Keep lamp away from materials that may burn.


Do not touch the lamp at any time. Use a soft cloth. Oil from skin may damage lamp. Do not operate the luminaire fitting with a missing or damaged shield.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

1. Minimum distance from the front of the lamp to combustible surfaces is 8".
2. Be sure to install the rail system where it can not be shorted out by conductive materials.
3. Make sure all connections are tight.
4. Note: Installations requiring a large number of fixtures may need additional adapters closer together for more support.

WARNING: Use of other manufacturers components will void warranty, E.T.L. listing and create a potential safety hazard. DIMMING HALOGEN LAMPS GREATLY REDUCES LAMP LIFE.

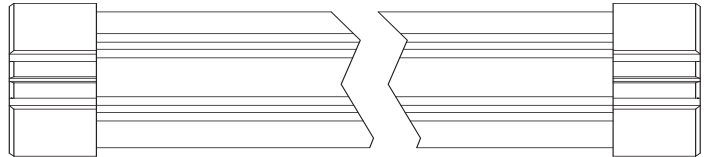

*NOT INCLUDED

FIGURE 1



LR-026

021606

www.SeaGullLighting.com



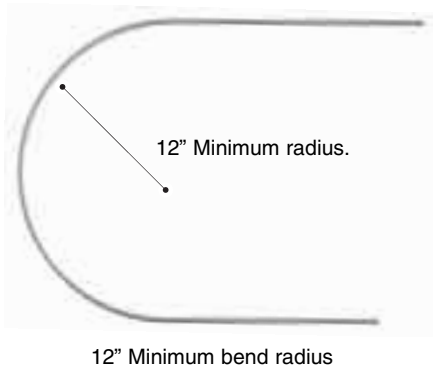


FIGURE 2

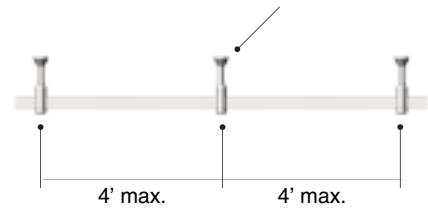


Select conductive or non-conductive adapter for joining two rail sections.

FIGURE 3

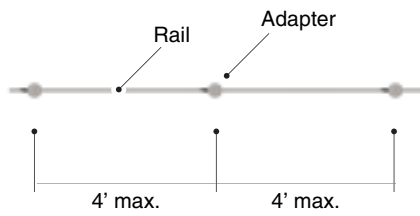


For straight runs, space adapters 4' max. apart.

FIGURE 4

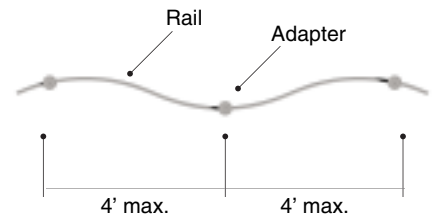


For free form wave installations, locate adapters at the peaks of the curve max. 4' apart.

FIGURE 5

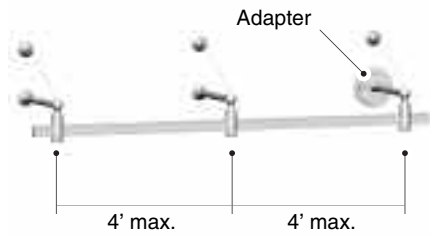

Space wall feed and support adapters 4' max. apart.

FIGURE 6

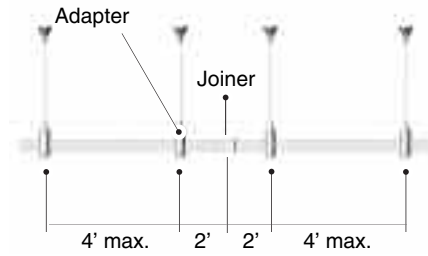

Space adapter 2' away from joiner.
Space additional adapters 4' apart.

FIGURE 7