

INSTALLATION AND SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

- Be sure the electricity to the system you are working on is turned off; either the fuse removed or the circuit breaker set at off.
- Use of other manufacturers components will void warranty, listing and create a potential safety hazard.
- If you are unclear as to how to proceed, contact a qualified electrician.
- You don't need special tools to install this fixture.
- Be sure to follow the steps in the order given.
- Read instructions carefully.
- Save these instructions.

1128FB FIRE BOX HOUSING FOR DIRECT CONTACT WITH INSULATION

STEP 1:

Position the Fire Barrier Box against joist/trusses/hat channel.

STEP 2:

Secure with screws (not supplied).

STEP 3:

Punch out appropriate knock-out. Install appropriate strain relief (not supplied) to Fire Barrier Box.

STEP 4:

Feed supply wires through Fire Barrier Box, and secure them in place with strain relief.

STEP 5:

ELECTRICAL CONNECTION

Junction box contains two wires, a black (hot) and white (neutral) which must be spliced to the supplied (house) wires. **MAKE SURE TO SPLICE WHITE TO WHITE AND COLORED OR BLACK TO BLACK.** After splicing has been completed, insert wires carefully into junction box. Connect green ground wire to green grounding pigtail in junction box. Replace cover.

STEP 6:

Slide recess can along hanger bars to correct position. Secure in place. Follow the additional instruction sheet supplied with the recess can.

STEP 7:

Apply a bead of fire void (intumescent caulk or fire barrier caulk) (not provided) around the power supply wire exit hole.

STEP 8:

CUTTING A HOLE

Locate the center of proposed opening on your tile or ceiling material and mark it. Use the template provided to draw a 6 3/8" dia. circle around the center point. Cut along the circular line.

If any questions, please call Sea Gull Lighting at 866-449-2821.

CAUTION: SEE WARNING INSTRUCTIONS BEFORE PROCEEDING

NOTE: THIS BARRIER IS RATED FOR 1-HOUR FIRE RATING

NOTE: SPACING OF FIXTURES NOT TO EXCEED A MAXIMUM OF 2 FIXTURES PER 36 SQUARE FOOT AREA. MINIMUM ON CENTER FIXTURE SPACING OF 24 INCHES WITHIN THE SAME JOIST/TRUSS CAVITY. MINIMUM CENTER TO CENTER FIXTURE SPACING OF 34 INCHES FOR ADJACENT JOIST/TRUSS CAVITIES.

**WARNING: FOR FIXTURES PROVIDED WITH 75° C. OR 90° C. SUPPLY WIRE WARNING ONLY (THESE WARNINGS ARE PROVIDED ON THE LABEL AND ON THE FIXTURE CARTON).
WARNING: RISK OF FIRE. MOST DWELLINGS BUILT BEFORE 1985 HAVE SUPPLY WIRE RATED 60° C. CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING.**

PASSING THE SOCKET BRACKET STOP MAY CAUSE THE LIGHT TO CYCLE ON AND OFF OR NUISANCE TRIP.

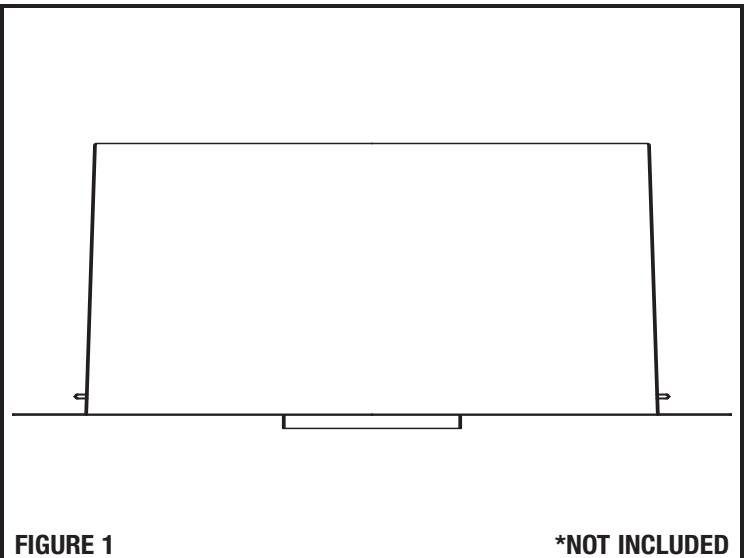


FIGURE 1

*NOT INCLUDED



sea gull lighting®

Installation And Safety Instruction

HC-972

112607

Fill In Item Number On Carton And
File This Sheet For Fixture Reference. ITEM# _____