

TEMPLATE FOR CONCRETE ANCHORS

HC-1339 CONTINUED


INSTALLATION AND SAFETY INSTRUCTIONS HC-1339

IMPORTANT SAFETY INSTRUCTIONS

- Be sure the electricity to the system you are working on is turned off; either the fuse removed or the circuit breaker set at off.
- Use of other manufacturers components will void warranty, listing and create a potential safety hazard.
- If you are unclear as to how to proceed, contact a qualified electrician.
- You don't need special tools to install this fixture.
- Be sure to follow the steps in the order given.
- Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system.
- Read instructions carefully.
- Save these instructions.

INSTALLATION

1. Secure post base (8188) to concrete or wood deck with concrete anchors and/or lag screws (not included).
2. Alternate Methods: Secure post base (8188) to concrete footing by inserting concrete anchors into wet concrete, making sure the spacing of the anchors will align with holes in post base. (Or) Attach concrete anchor to post base with nut. Center post base over wet concrete footing and tap down the anchors into the concrete until nut is flush with post base.
3. When concrete is dry, make sure nuts are tight.
4. Cover hex nuts with plastic caps.
5. Slip top post column (8189) into post base (8188) and secure with three set screws.

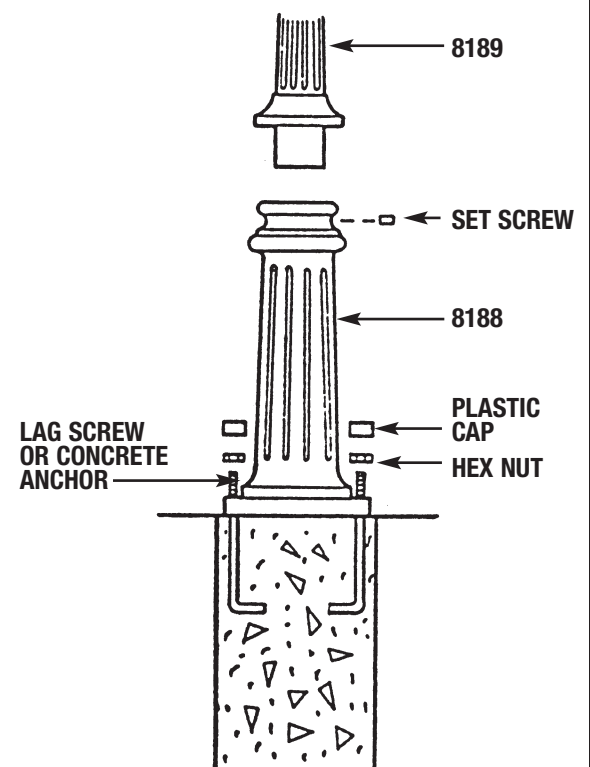

020408