


INSTALLATION AND SAFETY INSTRUCTIONS HC-336

FOR YOUR SAFETY

WARNING: Be sure the electricity to the wires you are working on is shut off; either the fuse removed or the circuit breaker off.

INSTALLATION

1. Cut rod (D) to desired height.
2. Insert rod (D) into coupling (E). Secure with set screw (F).
3. If applicable, feed Ambiance™ cable (not included) through rod (D).
4. If applicable: Insert spring (A) into rod (D), and rotate end cap (B), depending on which end of the aluminum extrusion (not included) it is installed on.
5. Secure end cap (B) onto aluminum extrusion with screws (C).

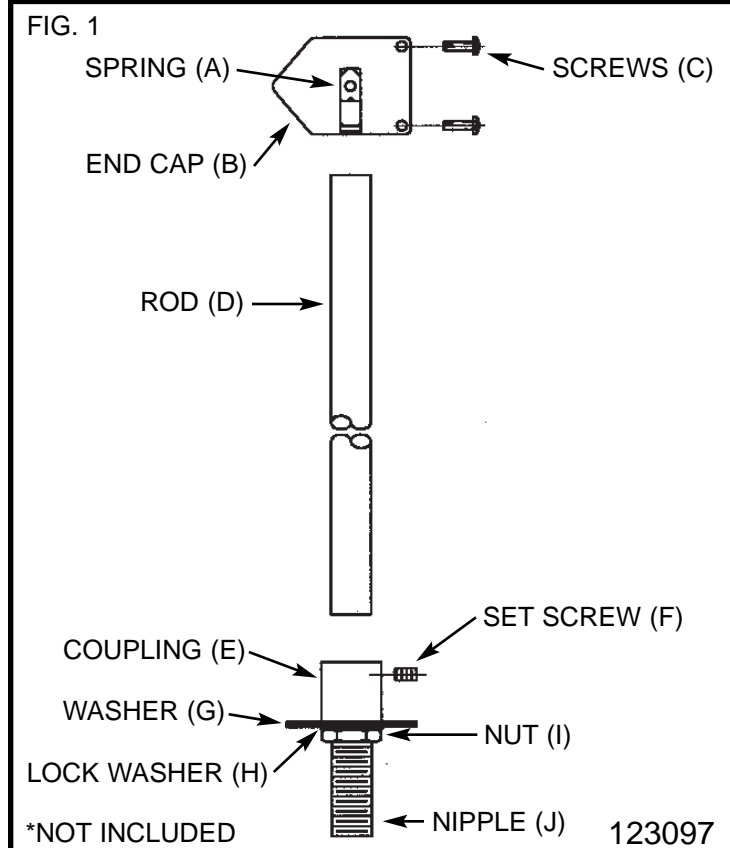

INSTALLATION AND SAFETY INSTRUCTIONS HC-336

FOR YOUR SAFETY

WARNING: Be sure the electricity to the wires you are working on is shut off; either the fuse removed or the circuit breaker off.

INSTALLATION

1. Cut rod (D) to desired height.
2. Insert rod (D) into coupling (E). Secure with set screw (F).
3. If applicable, feed Ambiance™ cable (not included) through rod (D).
4. If applicable: Insert spring (A) into rod (D), and rotate end cap (B), depending on which end of the aluminum extrusion (not included) it is installed on.
5. Secure end cap (B) onto aluminum extrusion with screws (C).

