

PRATT STREET PRISMATIC & METAL ONE LIGHT PENDANTS

65085; 65060

General Product Information



Intertek

SAVE THESE INSTRUCTIONS!




STANDARD INSTALLATION



INDOOR



DRY LOCATION

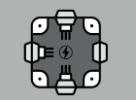

NEC COMPLIANT JUNCTION BOX



BULB(S) (NOT INCLUDED)



CONVERTS TO LED



ADAPTABLE TO SLOPED CEILINGS



PLEASE SEE [visualcomfort.com](http://visualcomfort.com) FOR PRODUCT SPECS



CLEAN WITH SOFT, DRY CLOTH ONLY. NO HARSH CHEMICALS!



BEST PRACTICE: HANDLE FIXTURE WITH GLOVES



Product Warranty



FCC Statement

Suggested/Required Tools



ELECTRIC DRILL



PHILLIPS-HEAD SCREWDRIVER



PENCIL/MARKER



WIRE CUTTER

Safety Information

**CAUTION-RISK OF FIRE**


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


**USE MINIMUM 90°C SUPPLY CONDUCTORS.**



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

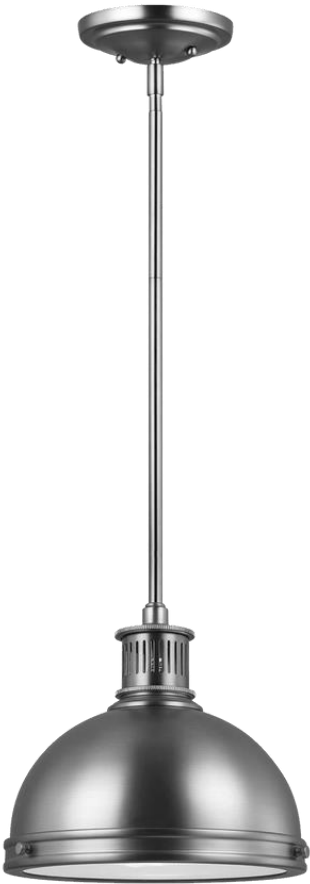

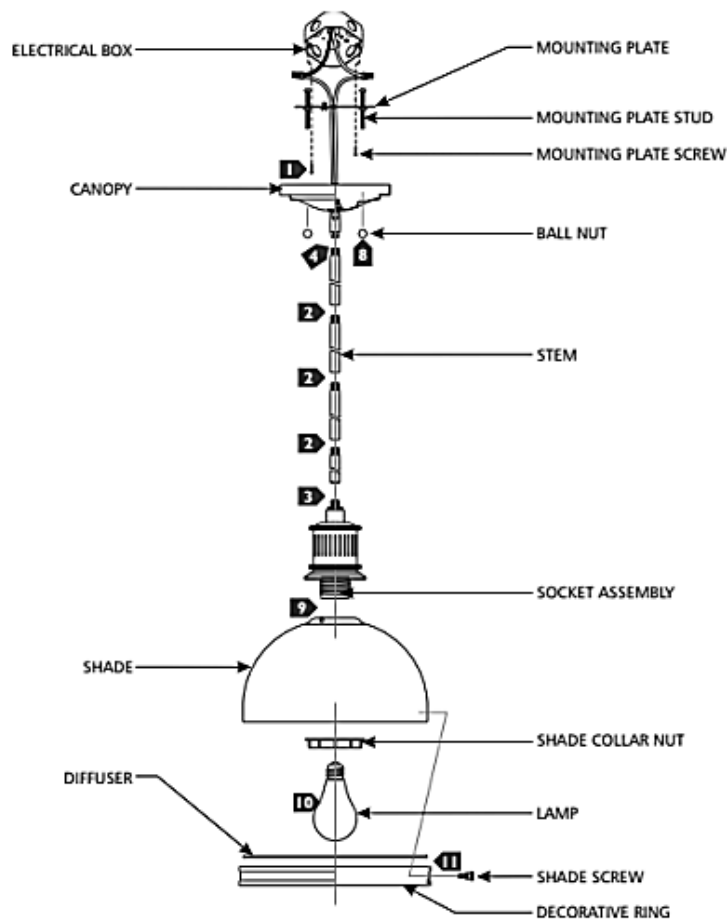

## INSTRUCTIONS

### I. Preparing the Fixture

1. Secure the mounting plate to the electrical box with two mounting plate screws.
2. Determine the desired height of the fixture and assemble the stems by screwing them together.
3. Feed the fixture wires through the stems and screw the stem assembly to the socket assembly.
4. Feed the fixture wires through the canopy and screw the canopy tightly onto the stems.

### II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
  - a) Hot fixture wire to hot power line wire
  - b) Neutral fixture wire to neutral power line wire
4. Carefully tuck all the wires into the junction box.

### III. Installing the Fixture

1. Align then place the canopy onto the mounting plate studs and secure it with the two ball nuts.
2. Place the shade over the socket and secure it in place by installing and tightly screwing the shade collar nut onto the socket.
3. Screw the lamp into the socket. Refer to the label on the socket for max wattage information.
4. Place the diffuser into the decorative ring and secure tightly to the shade using the shade screws.