

Drop Lens LED 2' and 4'

591320S, 591360S | 1.0

GENERATION LIGHTING CEILING

SAVE THESE INSTRUCTIONS!

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.



This fixture may be dimmed with a low-voltage electronic dimmer.

This instruction shows a typical installation.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

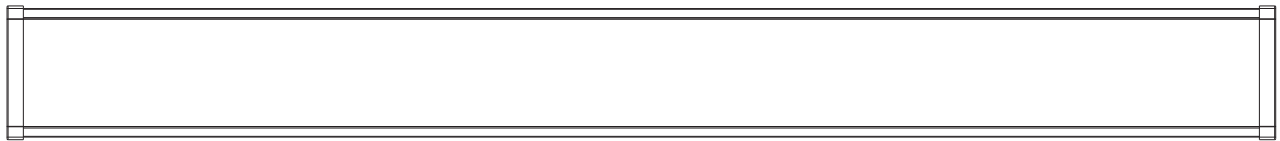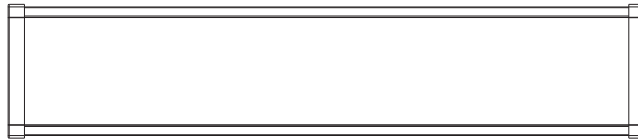

GENERATION LIGHTING
7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.generationlighting.com

Install the Fixture

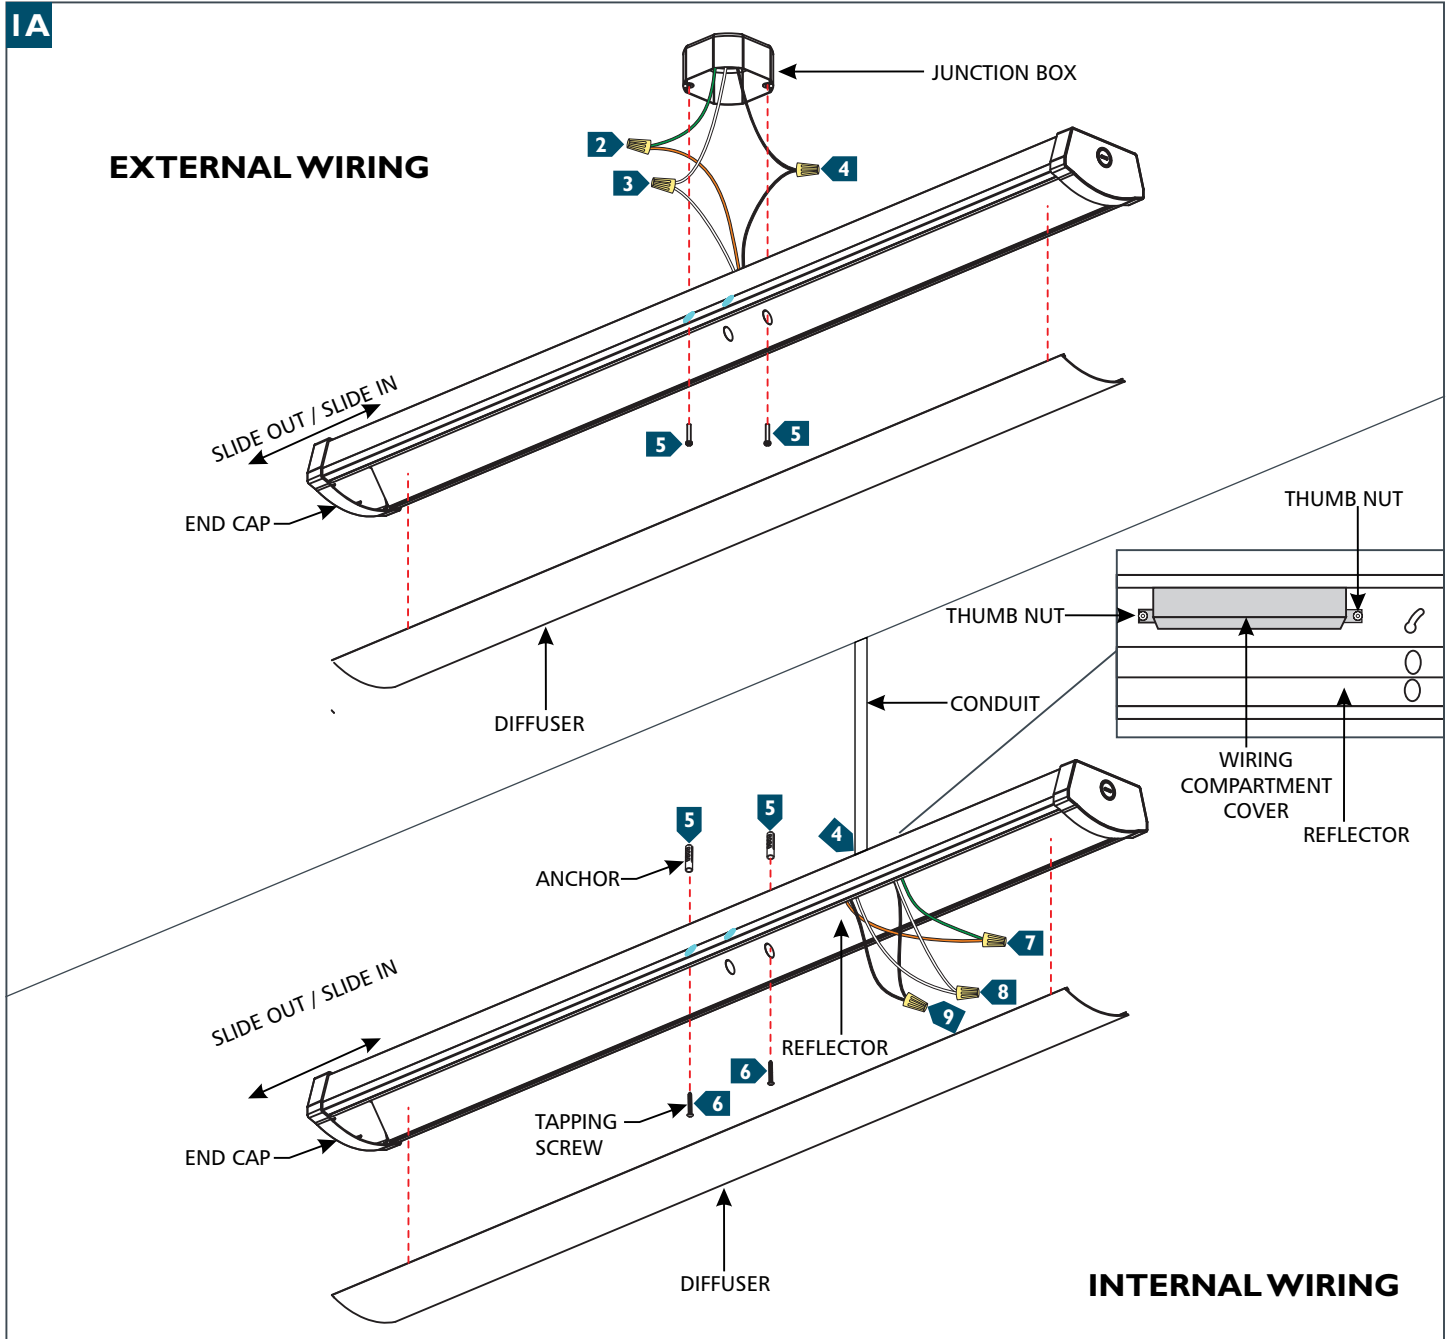

- 1** Slide the end cap outward and remove the diffuser.
- 2** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 3** Connect the white driver wire to the neutral power line wire with a wire nut.
- 4** Connect the black driver wire to the hot power line wire with a wire nut.
- 5** Neatly place all the wires into the junction box, align the fixture to the mounting holes and secure it in place with the fixture screws
- 6** Reinstall the diffuser and slide the end cap inward.

INTERNAL WIRING METHOD:

- 1** Slide the end cap outward and remove the diffuser.
- 2** Carefully pull the reflector from one side to the middle to access inside the fixture.
- 3** Remove the wiring compartment cover by removing the two thumb nuts.
- 4** Remove the back knockout and bring power wires to fixture.
- 5** Position the fixture to the mounting surface and mark the screw hole locations at the narrow section of the keyholes.
- 6** Using the provided anchors and/or tapping screws, properly secure the fixture to the surface.
- 7** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 8** Connect the white driver wire to the neutral power line wire with a wire nut.
- 9** Connect the black driver wire to the hot power line wire with a wire nut.
- 10** Place the wires and wire nut connections into the wiring compartment, reinstall the cover, and secure in place with the two thumb nuts.
- 11** Put the side of the reflector back to its original position.
- 12** Reinstall the diffuser and slide the end cap inward.