
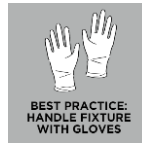
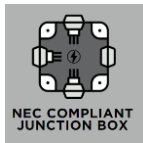
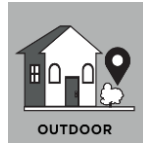
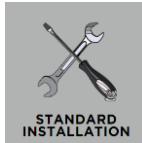



SAYBROOK ONE-LIGHT MEDIUM POST

GLO1051

General Product Information

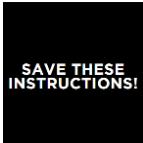

WARRANTY

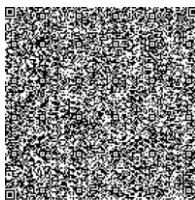

FCC STATEMENT

Tools Required



Safety Information

CAUTION-RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.



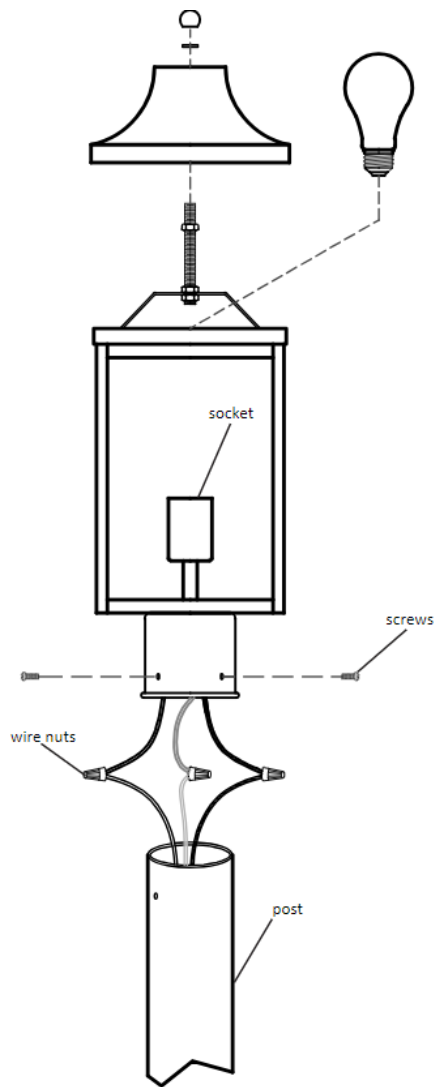

INSTRUCTIONS

I. Preparing the Fixture

1. Screw the lamp into the socket. Please refer to the label on the socket cover for max wattage information.
2. Slip the top cover and rubber washer through the center pipe. Lock them all together by fastening with finial.
3. Place the post cup over post and mark the position of holes in the post cup on the post.
4. Remove the post cup and expose the supply wiring from the above post. Drill 1/8" (3mm) diameter pilot holes in post at places where marked.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green or bare copper wire without insulation).
3. Adjust the length of the wires using a wire stripper/cutter, if necessary.
4. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) Hot fixture wire (black) and hot power line wire from the junction box (hot to hot)
 - b) Neutral fixture wire (white) and neutral power line wire from the junction box (neutral to neutral)

III. Installing the Fixture

1. Slip post cup onto post. Align holes in post cup with holes in post. Attach post cup to post with provided sheet metal screws.