



RORY MEDIUM BATH SCONCE

GLV1012

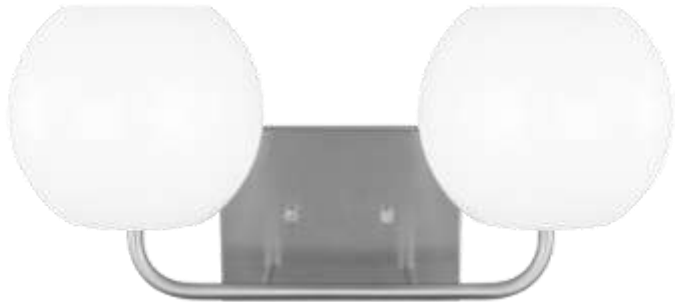

General Product Information

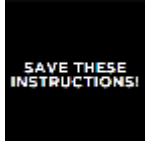

Product Warranty



FCC Statement

Safety Information


IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

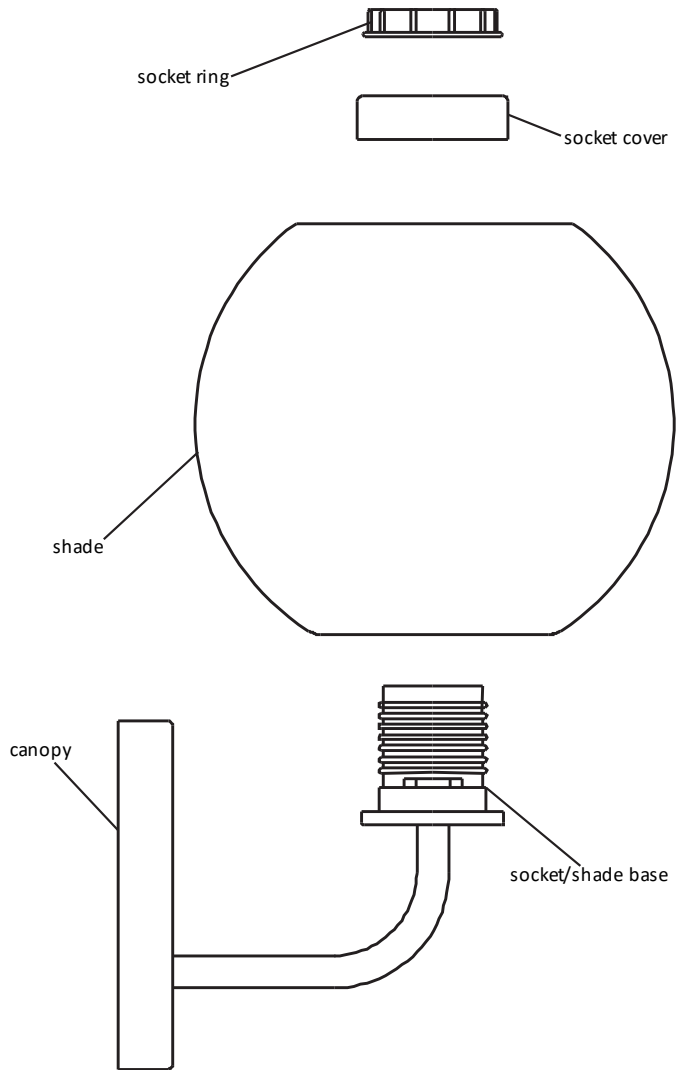

INSTRUCTIONS

I. Preparing the Fixture

1. Secure the mounting plate to the junction box.

II. Wiring the Fixture

1. Connect the fixture to a suitable ground in accordance with local electrical codes.
2. Connect the following wires using a wire nut:
 - a) White fixture wire to the neutral power line wire
 - b) Black fixture wire to the hot power line wire

III. Installing the Fixture

1. Neatly place all the wires into the junction box and place the fixture base onto the mounting plate.
2. Install the shade by sliding it over the socket, then secure it in place with the socket cover and ring.
3. Screw the lamps into the sockets. Refer to the label on the lamp socket for Max Wattage Information.